



Fleece Performance Engineering, Inc.
468 Southpoint Cir, Suite 300
Brownsburg, IN 46112
855-839-5040

Cummins Dual Pump Controller Installation Instructions



1. Remove CP3 harness from lower pump.
2. Connect female end of controller to factory harness.
3. Connect both male connectors to each pump.
4. Connect battery leads to battery. (Orange wire with fuse holder to positive terminal, Black wire to negative)