

INSTALLATION INSTRUCTIONS

PRODUCT: ALL LIGHTS ON™ FOR TOYOTA TUNDRA


FPE-2022-81
November 2022

INSTRUCTIONS FOR: 2007-2017 Tundra and 2008-2018 Sequoia with factory installed fog lamps

ESTIMATED INSTALLATION TIME: 5 minutes


STEP 1: OPEN the vehicle hood and locate the relay / fuse block on the right side of the engine, behind the battery. REMOVE the cover panel.

STEP 2: Carefully REMOVE the relays labeled: FOG and DIM. It may be necessary to use a pair of pliers to remove the relays.

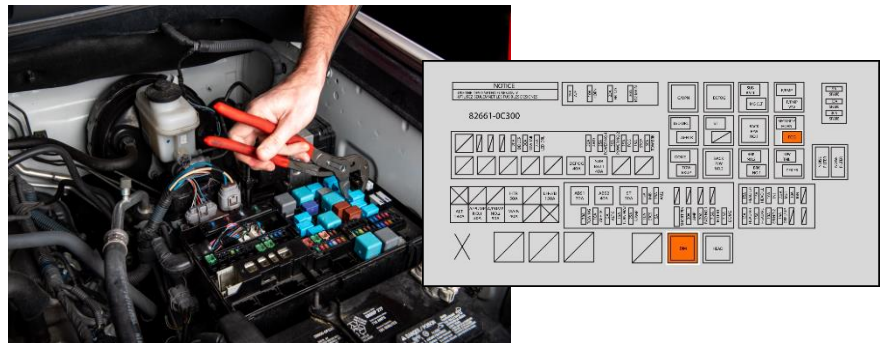

STEP 3: Insert the two relays that were removed through the All Lights On boards with the wire connection facing towards the top of the relay. The board will make a firm connection with the relay.

NOTE: See orientation of boards onto relays at right. DO NOT install upside down.

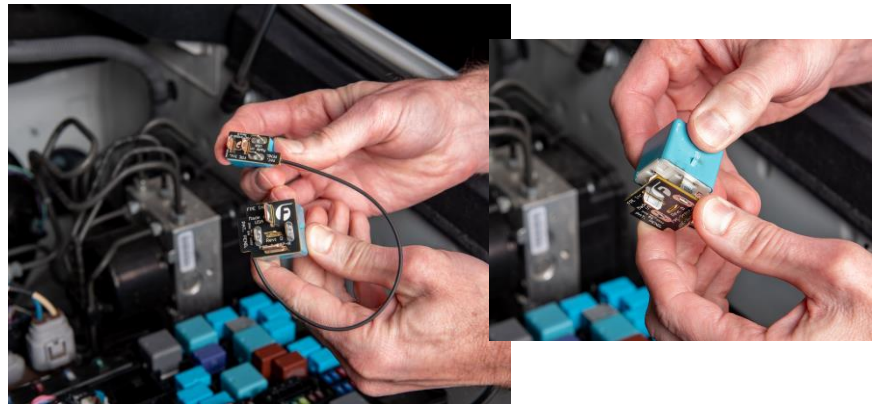

STEP 4: Reinstall the two relays back into their original location. Route the connecting wire along the side of the relay box. Install the relay panel cover.

Operation:

MY2007-2013 (Separate high and low bulbs): High beams, driving lights, and fog lights all on when high beams are enabled.

MY2014-2017 (Dual filament bulbs): High beams and fog lights on when high beams are enabled.

