

INSTALLATION INSTRUCTIONS

SUBJECT: LML CP3 CONVERSION KIT W/ CP3

FPE-2021-56
June, 2021

FITMENT: 2011–2016 GMC Sierra and Chevrolet Silverado 2500/3500

EST. INST. TIME: 6-8 Hours

TOOLS REQ'D: ½" fuel disconnect, 3/8" fuel disconnect, 3/8" ratchet, metric socket set, metric wrench set, 1 1/16" socket, 27mm socket, 3/8" socket extensions, fan clutch removal tool, 3/8" and ½" torque wrench, ¼" and 5/16" nut driver, pliers, 7/8" wrench, 15/16" wrench, pry bar, hose pick.

KIT CONTENTS:

Item	Description	Qty
1	CP3 Injection Pump	1
2	CP3 to Engine Block Adapter	1
3	CP3 Feed Hose	1
4	Return Fuel Hose	3
5	Higher Pressure Fuel Line	3
6	Low Pressure Fuel Feed Line	1
7	CP3 Feed Fitting & Sealing Washer	1
8	CP3 Return Fitting & Sealing Washer	1
9	Hose Clamps	1
10	Fuel Rail Nut	1
11	O-ring	1
12	M8x1.25x35mm Screw	3



WARNINGS:

- Use of this product may void or nullify the vehicle's factory warranty.
- The purchaser and end user releases, indemnifies, discharges, and holds harmless Fleece Performance Engineering, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Fleece Performance Engineering, Inc. will not be liable for any direct, indirect, consequential,

INSTALLATION INSTRUCTIONS

GENERAL OVERVIEW

Removal of the stock fuel injection pump involves the following key steps:

1. Disconnect both batteries, drain coolant system and remove air cleaner.
2. Remove intake air box and coolant surge tank bracket.
3. Disconnect black plastic cold side charge air cooler tube from throttle body and blue hot side charge air cooler pipe from turbocharger.
4. Disconnect chassis fuel lines from quick connect fittings at rear of engine.
5. Release accessory drive belt tensioner and remove turbocharger air resonator.
6. Unbolt and move aside A/C compressor and alternator(s).
7. Unbolt cooling fan from front of engine, move aside.
8. Remove intake manifold tube
9. Remove EGR bypass pipe, valve and front cooler.
10. Remove center intake manifold (Y bridge) and turbo air inlet adapter.
11. Remove turbocharger coolant return banjo pipe.
12. Remove high and low pressure fuel lines.
13. Remove stock injection pump.
14. Swap gear and nut from the old pump to the new pump.

Installation of the new CP3 pump is as follows:

1. Install new injection pump (does not need to be timed).
2. Install secondary high pressure rail plug.
3. Remove old high pressure pump line anchor bracket from Rail to Rail high pressure line.
4. Replace low pressure fuel supply tube with new tube and install to engine.
5. Install new supplied low pressure fuel supply hose and high pressure fuel lines. Install new low pressure return hose.
6. Install center intake manifold, EGR cooler, turbocharger air inlet adapter.
7. Install EGR bypass pipe, valve and intake manifold tube.
8. Reinstall turbocharger coolant banjo pipe w/ new seal.
9. Reinstall cooling fan assembly, alternator(s) and A/C compressor.
10. Install drive belt and turbocharger air resonator.
11. Reconnect cold side charge air cooler duct and hot side charge air cooler pipe.
12. Reconnect air cleaner, chassis fuel line connections, batteries
13. Refill coolant.
14. Prime fuel system

INSTALLATION INSTRUCTIONS


REMOVAL OF CP4 INJECTION PUMP

1. Disconnect both batteries, drain coolant system and remove air cleaner.
 - a. Be careful not to use impact tools on the battery terminals as they will easily be damaged if they are over loosened.
 - b. Coolant is best drained from the lower radiator hose. Place a large bucket underneath the vehicle to drain the coolant into.
 - c. Air cleaner can be removed by first loosening the hose clamps and then gently pulling off the duct. The box itself can be removed by lifting up. Be careful not to damage the A/C line during removal.
2. Remove airbox and coolant surge tank bracket. Next, disconnect black plastic cold side charge air cooler (CAC) tube from throttle body.
 - a. Gently pry on the locking ring tooth with a screw driver while turning counter clockwise. As the locking ring is rotated, the CAC duct itself can be gently pulled out and off.
 - b. Remove CAC pipe from the turbocharger. The blue neoprene charge air cooler can be dislodged using a deep well 11mm socket wrench or a closed 11mm ratcheting box wrench. The pipe does not need to be removed at the CAC itself.
3. Disconnect chassis fuel lines from quick connect fittings at rear of engine using a quick connect removal collar tool. Use 3/8" and 1/2" fuel disconnect tools to perform this.
4. Remove the four (4) cooling fan shroud bolts.
 - a. For 2015 vehicles, it is not necessary to remove the fan shroud, gently adjust the shroud towards the radiator to provide access to the cooling fan center.
 - b. For 2014 and earlier vehicles, the fan shroud is two piece and can be more easily removed.
 - c. Unbolt cooling fan mount from front of engine by loosening three 15mm bolts and two stud nuts.
 - d. Remove the fan from the drive pulley using a fan removal tool. Perform this before removing the belt.
5. Release tension of the accessory drive belt by rotating tensioner using a 1/2" drive socket wrench. The intake manifold cover (embossed with 6.6L Turbo Diesel) can be removed

INSTALLATION INSTRUCTIONS


by loosening the two 10mm bolts affixing it to the intake pipe. Remove the alternator bracket.

6. Unbolt and move aside A/C compressor. The refrigerant does not need to be evacuated. The alternator(s) can be removed and put aside.
7. Remove intake manifold tube.
 - a. First loosen the two 13mm bolts affixing the pipe to the intake manifold near the MAP sensor.
8. Remove turbocharger coolant return banjo pipe from the turbocharger (#5 in diagram below) -

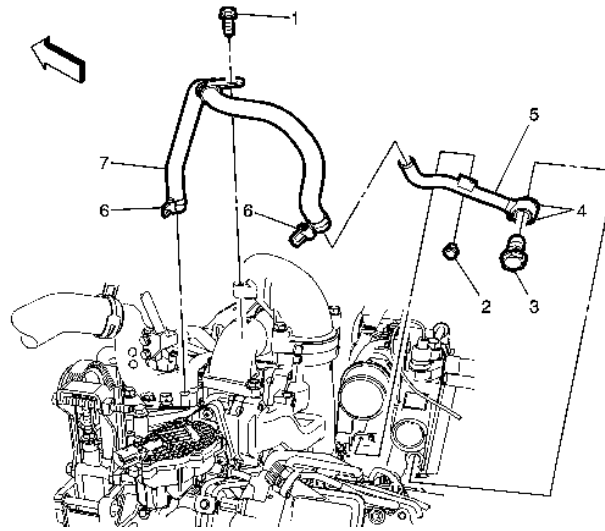


- a. Next, loosen the oil dipstick tube bracket bolts and the hidden 10mm bolt affixing the intake air heater ground bracket to the intake pipe. This 10mm is critical for proper operation of the intake air heater.

INSTALLATION INSTRUCTIONS

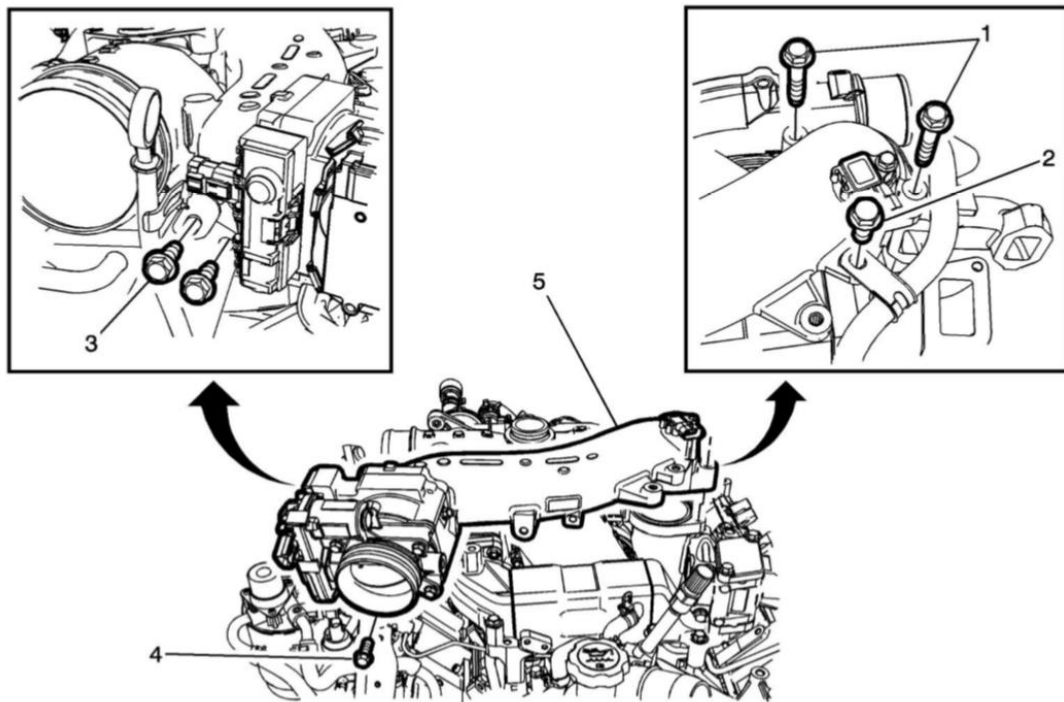


9. Remove the turbocharger air inlet adapter

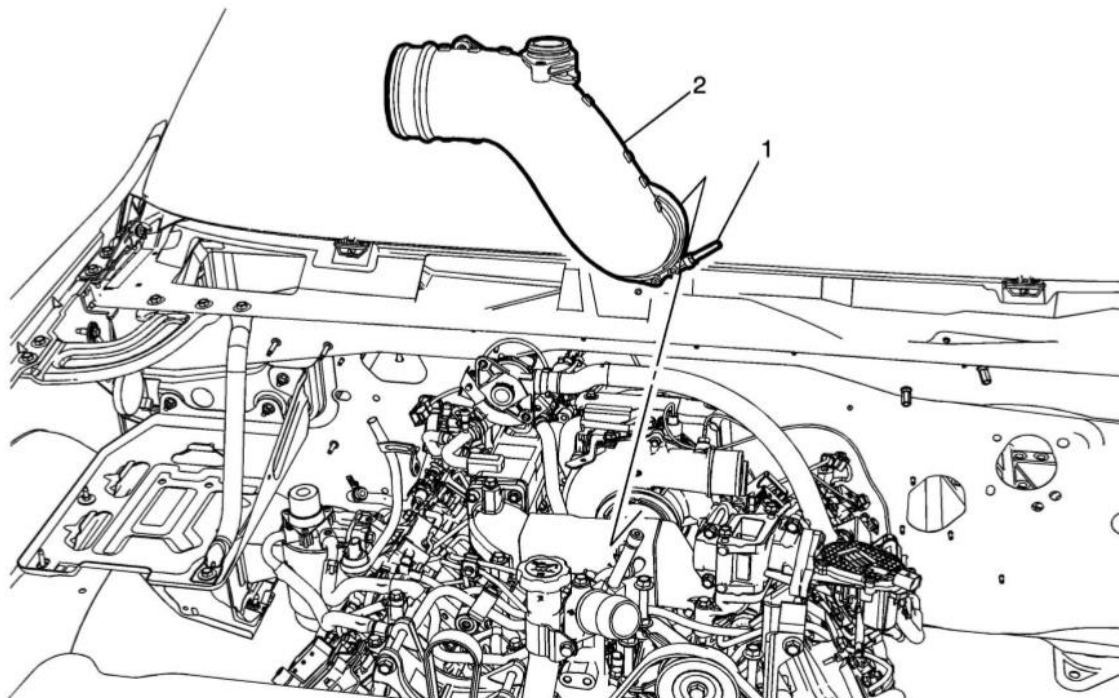


INSTALLATION INSTRUCTIONS

10. Remove EGR bypass pipe, valve and front cooler.

- a. Remove the EGR bypass pipe that connects the EGR bypass valve to the EGR valve.

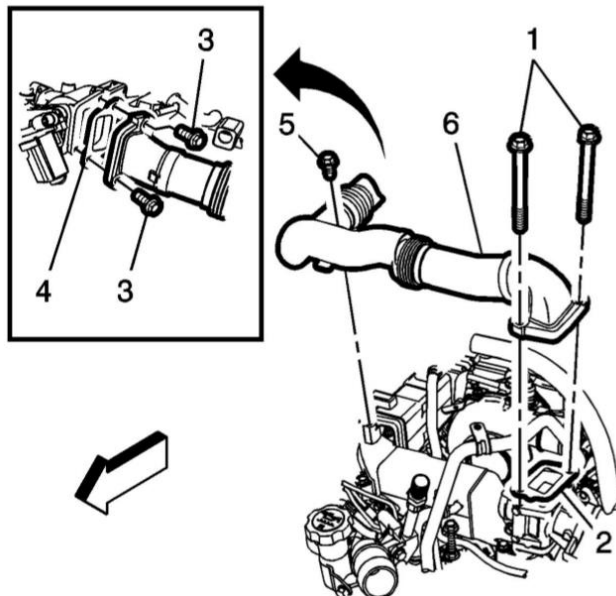


- b. The EGR valve can then be removed by loosening the four bolts that attach it to the intake manifold.

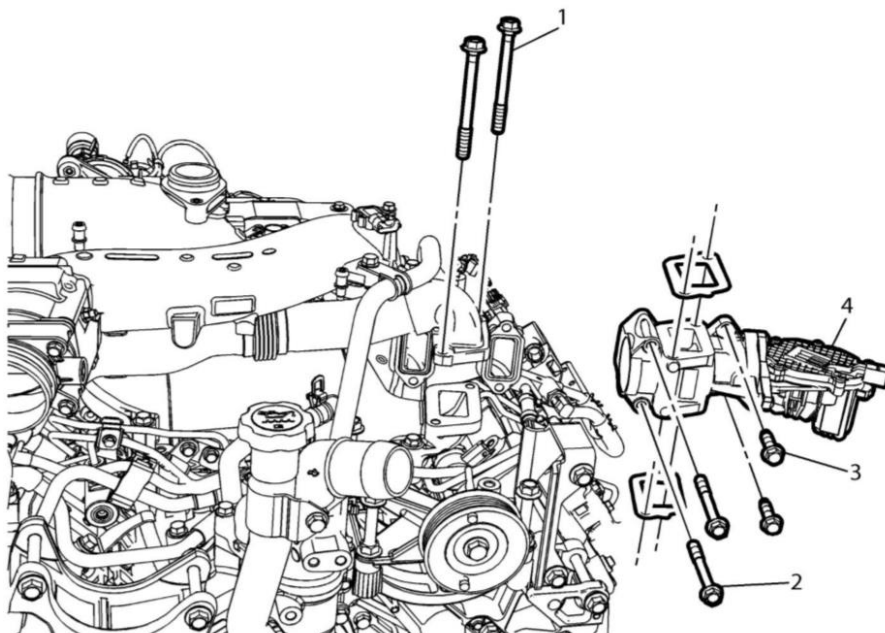


INSTALLATION INSTRUCTIONS

- c. The 4 front EGR cooler bolts can be accessed by carefully threading through a ¼" drive socket extension and a swivel socket.


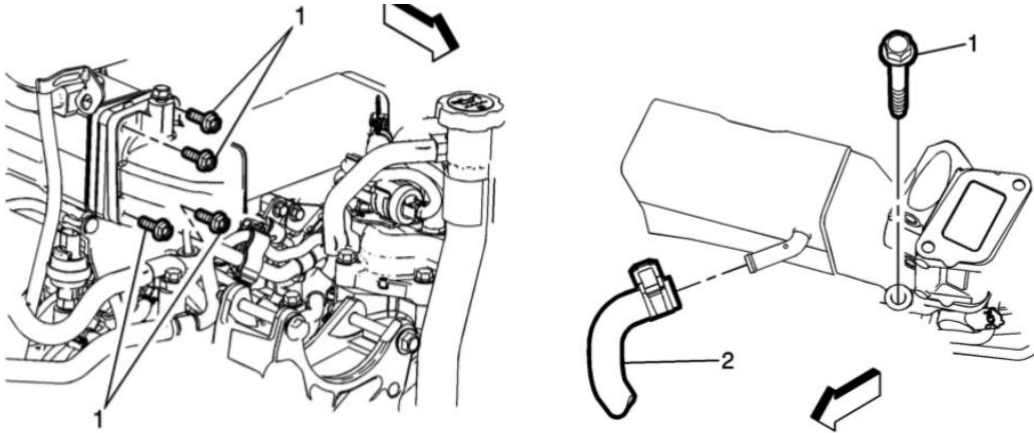


11. Remove the turbocharger air inlet adapter

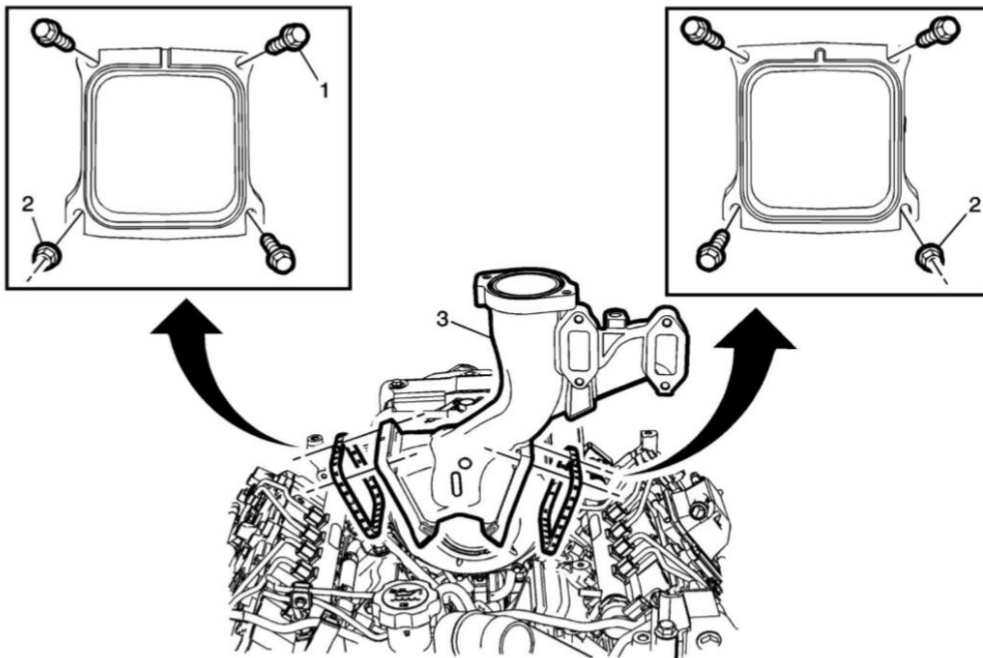

INSTALLATION INSTRUCTIONS


12. Remove high- and low-pressure fuel lines.

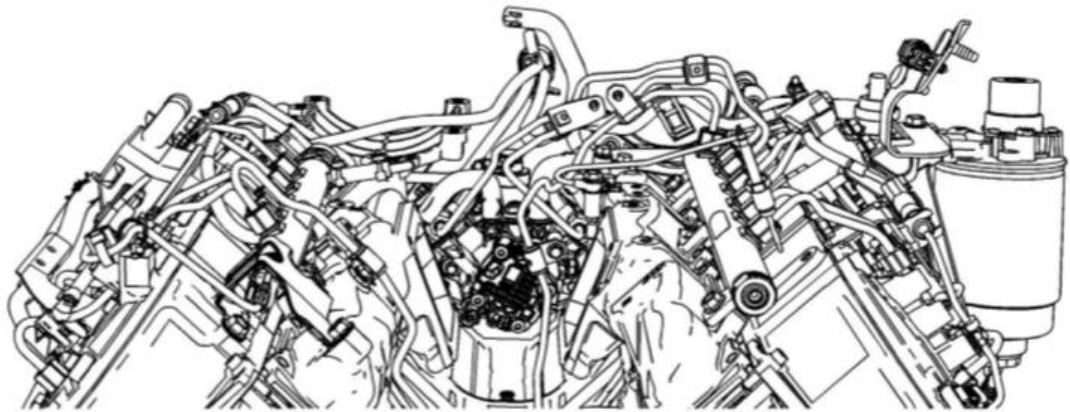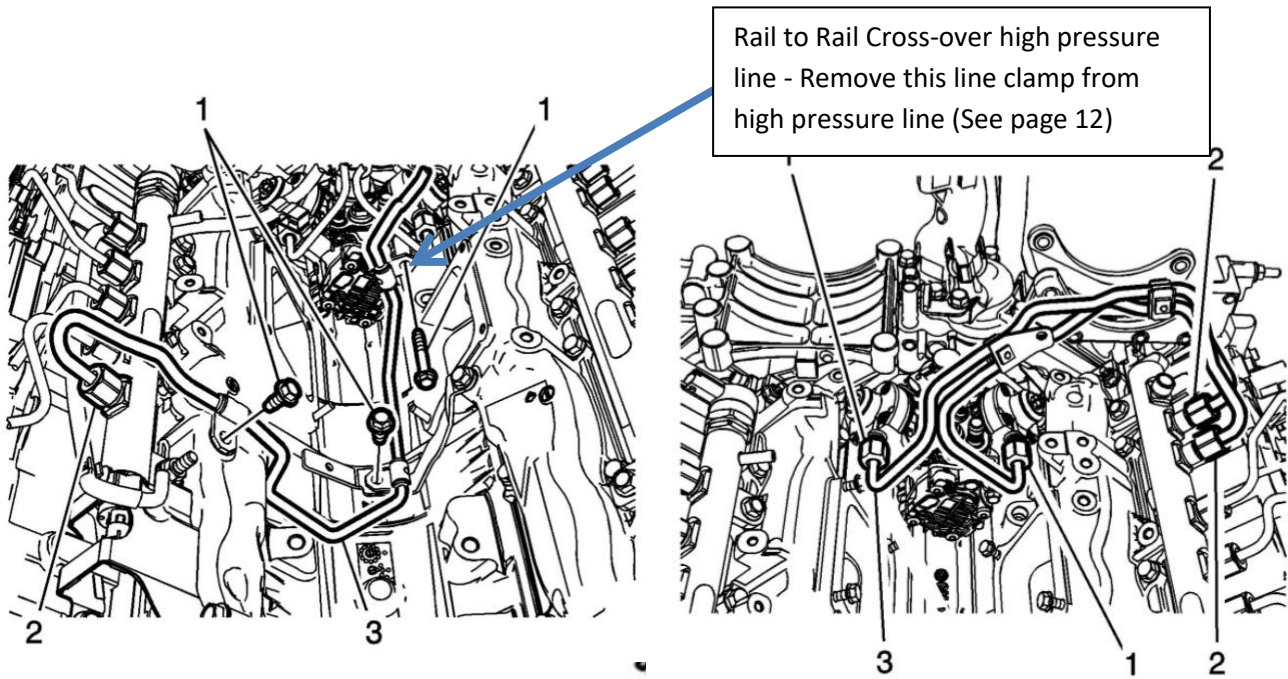

13. Disconnect electrical harness connectors for the fuel injection pump temperature sensor and pressure regulator.

INSTALLATION INSTRUCTIONS

14. Remove the four bolts that secure the injection pump to the cylinder block.

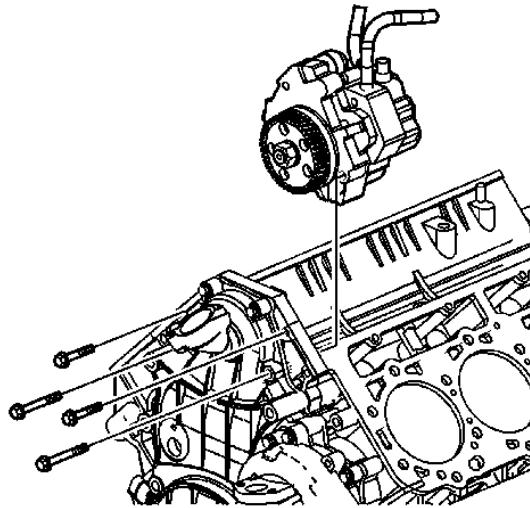

15. Remove stock injection pump.

INSTALLATION INSTRUCTIONS

PREPARE CP3 INJECTION PUMP FOR INSTALLATION

1. Remove the green temperature sensor from the OLD injection pump and reconnect it to the proper engine wiring harness connector. This sensor will need to be connected and secured to the engine wiring harness or other suitable location.
2. Hold the OLD injection pump by the drive gear in a vice with copper jaw liners or soft jaws.
3. Loosen the gear nut until the nut is even with the end of the gear shaft.
4. Remove the gear from the tapered shaft of the old fuel pump.
5. Clean all mating surfaces.
6. Install the new CP3 to engine block adapter (included in the kit) to the new injection pump with the 3 bolts supplied in the kit. Be sure to lubricate the flange O-ring with engine oil prior to installation or an oil leak could occur. Tighten the bolts to 20 lb ft.
7. Install the gear and tighten the gear nut to 75 lb ft.

NOTE: The CP4 nut is longer than the CP3 nut, however, it will not interfere with the front cover. It will also provide the same amount of thread engagement.

INSTALLATION INSTRUCTIONS


INSTALLATION OF THE NEW CP3 PUMP

IMPORTANT NOTE: We recommended removing and inspecting the high-pressure regulator and inspecting it for debris. If debris is found in the high-pressure regulator, we recommend replacing the regulator, the injector return line and check valve assembly.

GM Pressure Regulator P/N: 12611872

GM Injector Return System P/N: 12639000

1. Lubricate the o-rings on the new injection pump adapter with engine oil and install onto the cylinder block. Note the CP3 pump does not need to be timed to the camshaft. Tighten the four bolts to 18 lb ft. Do not draw the pump into the block using the attachment bolts or they may strip out of the aluminum mounting plate, it must be pushed into position.

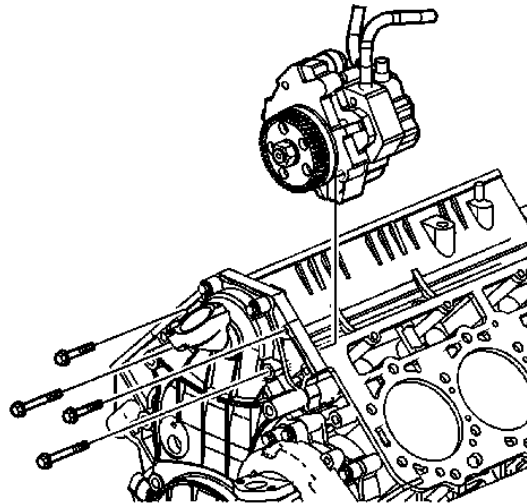


Before re-installing the rail-to-rail cross-over high-pressure fuel line, remove the line clamp shown on page 8, best done as shown in picture below. Do not nick or damage HP line in any way. Install cross-over HP line and secondary HP rail plug and tighten fittings to 30 Nm (22 lb ft). The high pressure rail plug provided goes towards the open feed port toward rear of vehicle while the NEW supplied HP feed line from the CP3 goes toward the front. Note: torque is critical. Under or over torque will result in fuel leaks.

2. Replace low pressure fuel supply line with new extension and install to engine. Tighten the compression fitting to 35Nm (26 lb ft). TIP- clean and lightly lubricate low pressure feed tune compression fitting to ease installation in the valley.

INSTALLATION INSTRUCTIONS

3. Attach supplied fuel hose to the OEM fuel pump supply pipe and secure with constant tension clamps. Install the new fuel return hose. Be sure the return hose does not make contact with the high pressure Line.

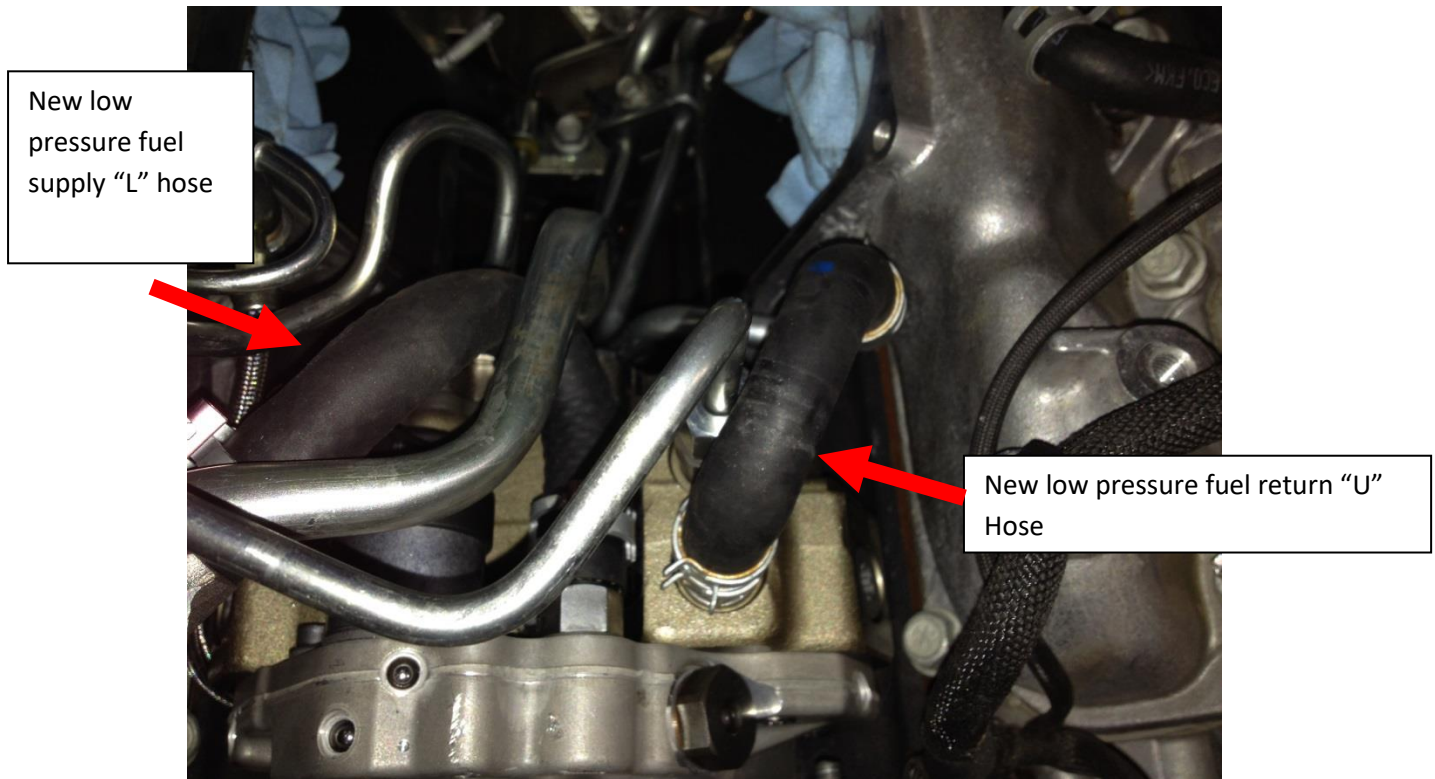

4. Install new high pressure line from pump outlet to RH rail. Tighten pump connection fittings to 38 Nm and rail connection fitting to 30 Nm.

INSTALLATION INSTRUCTIONS

5. Install hydrocarbon injector line to intake manifold. Tighten to 10 Nm (89 lb in)



6. Reinstall turbo coolant banjo pipe. Tighten to 35 Nm (26 lb ft)
7. Install center manifold (Y-bridge). Tighten bolts and nuts to 10 Nm (89 lb in)
8. Install turbocharger air inlet adapter. Tighten clamp to 10 Nm (89 lb in)
9. Install EGR cooler. TIP: hand-start all EGR fasteners prior to tightening. Tighten bolts to 25 Nm (18 lb ft).
10. Install EGR bypass pipe and EGR valve. Tighten all EGR bolts to 25 Nm (18 lb ft)
11. Install intake manifold tube to engine. Tighten all fasteners to 25 Nm (18 lb ft)
12. Reinstall alternator(s) Tighten generator bolts to 58 Nm (43 lb ft). Battery cable nut should be tightened to 12 Nm (106 lb in)
13. Reinstall A/C compressor. Tighten bolts to 58 Nm (43 lb ft)
14. Install drive belt and center intake manifold cover.
15. Reinstall cooling fan / pulley assembly. Tighten to 41 Nm (30 lb ft)
16. Reinstall fan shroud assembly. Tighten fan shroud bolts to 8 Nm (71 lb in)
17. Reconnect cold side charge air cooler duct and hot side charge air cooler pipe.
18. Reconnect air cleaner,

INSTALLATION INSTRUCTIONS

19. Reconnect chassis fuel line connections,
20. Reconnect battery cables. Tighten to 5 Nm (44 lb in)
21. Refill coolant using vacuum fill system or GM static fill procedure. Be sure to fill slowly so that overflow side of tank is at least $\frac{1}{2}$ full.
22. Replace fuel filter cartridge. NEW GM AC DELCO P/N 12664429 is recommended to ensure reliability of the fuel system.
23. Prime fuel system
 - a. Pump the priming pump repeatedly until it becomes hard.
 - b. Loosen the bleeder screw until fuel flows freely with no air present.
 - c. Check the fuel system for leaks.
 - d. Crank the engine for 10 secs or until the engine fires.
 - e. If the engine does not start and no leaks are observed, pump the priming pump repeatedly until it becomes hard again. Crank engine again for 10 second intervals until the engine starts. It may take 3-4 priming events to get the engine started.